
HARDTOP - ADJUST

Service repair no -



NOTE: Check that soft top hood fit is correct before making any adjustments to the hardtop fit. *See this section.*

1. Fit hardtop. *See this section.*

Adjust



NOTE: If necessary, only make adjustments to the cantrail seal and glass height. It should not be necessary to disturb any other settings.

Cantrail seal

1. Check that cantrail seal butts up to 'A' post seal correctly, the cantrail seal must not be distorted when the hardtop is secured.
2. To adjust cantrail seal release hardtop and carefully slide seal either backwards or forwards in its channel.
3. Ensure seals are located correctly in their channels.

Glass height



NOTE: If glass height is incorrect adjust the height to the minimum requirement, to prevent too much disturbance to the soft top hood settings.

1. Adjust glass height *See this section.*