

**BODY MOUNTING BRACKET****Left hand side**

The instructions for fitting the left hand bracket are the same as the right hand bracket.









HYDRAULIC PUMP

The hydraulic pump, hoses and ram pistons are supplied complete with hydraulic fluid and have been pre-tested as an assembly.

Undo the 'T' valve on the pump 1 1/2 turns anti-clockwise from the closed position. This isolates the rams from the pump allowing movement of the piston rods without running the pump.

WARNING:
DO NOT unscREW the valve completely, this will result in loss of hydraulic fluid.

- 1 Position the small mounting bracket on the pump and secure with 2 M5x10 torx head thread-forming countersunk screws. Tighten to 5Nm.
 - 2 Open the upper centre console lid and remove 2 screws securing the alarm sensor.
 - 3 Remove 4 screws securing vertical section of the centre console.
 - 4 Open the lower lid and remove the 2 front centre console screws.
 - 5 Remove 2 screws from each side of the centre console.
 - 6 Carefully lift the rear of the console and remove the upper section.
 - 7 With a craft knife carefully cut away the rear section of the lower centre console as shown.
- CAUTION:**
Do not cut into the sides of the centre console
- 8 Accessing the boot release switch (if fitted) through the rear of the centre console, compress the 2 locating tabs on each vertical side and remove the switch.
 - 9 Remove centre console tray and discard.
 - 10 Remove the 2 remaining screws and remove both console lids.

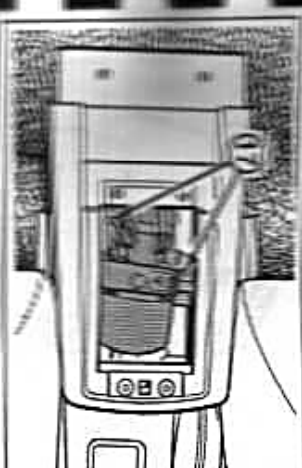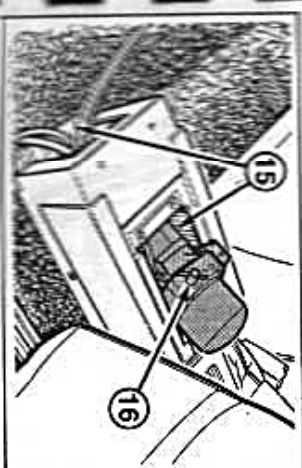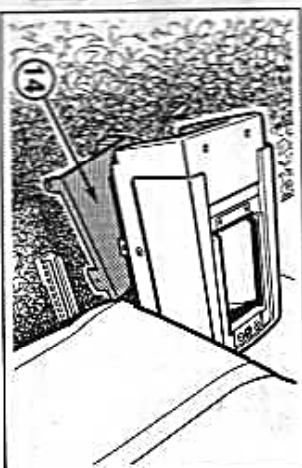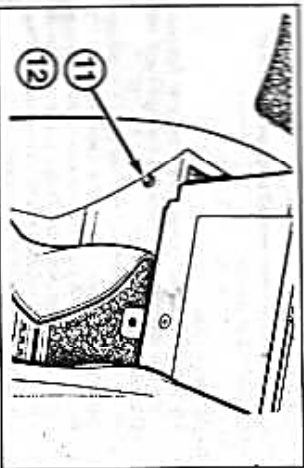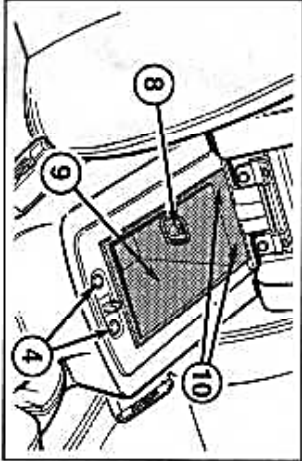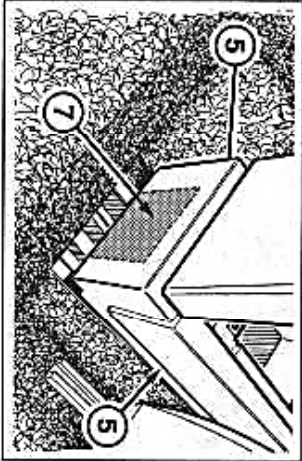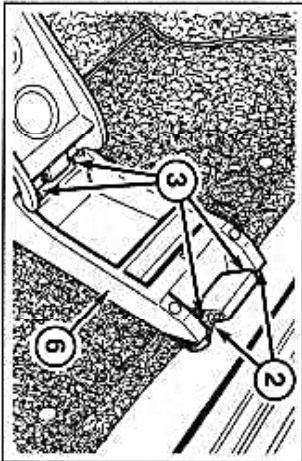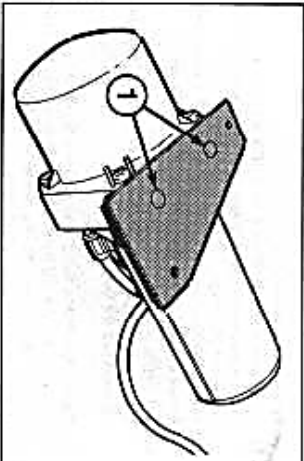

- 11 Remove and discard the M6 flange bolt from the RH-S of the centre console.
- 12 Fit a new M6x12 flange screw. Do not screw in fully.
- 13 Clean the area around the hole on the top surface of the large pump bracket and fit the self-adhesive rubber buffer over the hole.
- 14 Carefully fit the centre console and position the large pump bracket. Do not fix in place.
- 15 Feed the ram and hoses through the centre console and out of the rear.
- 16 Turn the pump through 90° so the 'T' handle is vertical and carefully ease the pump into position.
- 17 Slide the pump and bracket back and forth until the fixing holes line-up. Secure with 2 M5x10 flange screws and tighten to 5Nm.

NOTE:
For ease of fitment after the flange screws into a 1/4" drive with an adhesive material.

- 18 Slide the pump assembly rearwards until the slot in the body bracket locates on the M6 flange screw. Tighten to 10Nm.
- NOTE:**
Remove any body sealer preventing body bracket sliding rearwards.

- 19 Refit the screws to each side of the console.

